


Minimum Installation Requirements

Principle Systems



2" Minimum Toe Kick Depth

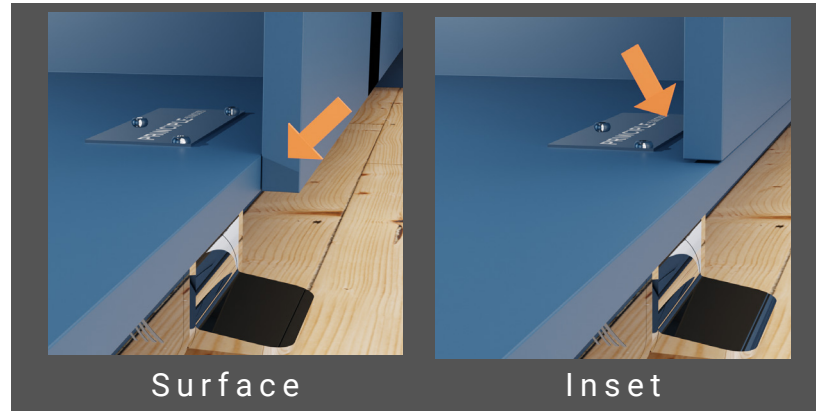

At least 2" (51mm) of flat toe kick space in the overhang for cabinets with surface mount cabinet door. For inset doors, add the door thickness to the 2" (51mm) requirement. Example: If the inset door is .5" (13mm) thick, the minimum toe kick depth required would be 2.5" (64mm). This is necessary to make sure the cabinet door and pedal mounting plate do not bind.

3.25" Minimum Toe Kick Height




At least 3.25" (89mm) of toe kick height is required. Measure from the floor up the vertical toe kick face to where it intersects with the cabinet base overhang.

Countertop Faucet Hole



A standard single countertop hole between 1.375" (35mm) to 1.5" (38mm) in diameter.

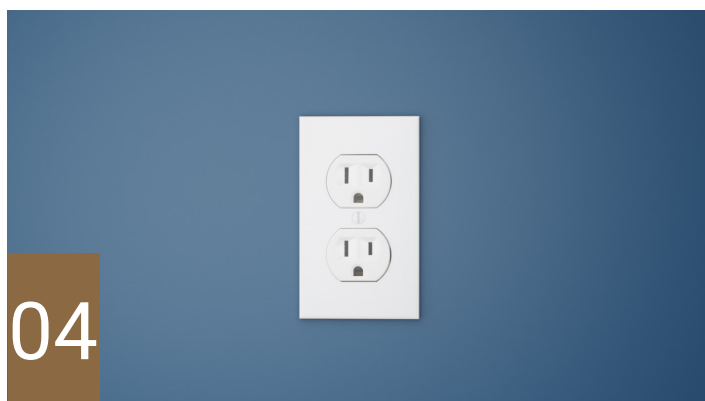

Standard Outlet

You will need one socket of a standard 110/120 volt power outlet. The socket should not be connected to a switch (ex: a light switch or garbage disposal switch).

The outlet should be within 6 feet of the mounted control box.